

## How to update Azor firmware

Latest A-Link package version 1.1.1.654 to download (AZOR firmware LO60312)

### How to update:

1. **Make sure that the communicator is powered by a power supply before starting the upgrade**
2. **Connect the communicator to your PC** via a USB cable.
3. **Run the A-Link program** on the newly assigned communicator logical drive.
4. Please **check the version of firmware** in your Azor (click the "**Version**" tab and check the "**Firmware**" field). ***If your firmware is LO60309 or higher, go to step no.10.***
5. [Download fwp update](#) and save the latest fwp software to your hard drive.
6. In the main menu select the "**Communicator**" tab - choose "**Update software**".
7. Select the **file with a \*.fwp extension** from the folder, where you saved it (step 5).
8. Follow the instructions on the screen and wait till the update is finished.
9. The A-Link program stops and performs a **communicator restart**. As a confirmation, two LEDs flash with a blue color.
10. [Download fwx update](#) and also save the latest fwx software to your hard drive (it is a second file).
11.
  - a) **Run the A-Link program again and it performs the second step of the update itself using the file with a \*.fwx extension** from the folder, where you saved it (step 10).
  - b) **If the firmware version in your Azor is LO60309 or higher**, in the main menu select the "**Communicator**" tab - choose "**Update software**". Select the **file with a \*.fwx extension** from the folder, where you saved it (in step 10).
12. **The A-Link program stops and performs a communicator restart**. Wait for approx. 2 minutes till the red LED (labeled GSM) goes off.
13. The firmware in the communicator and the A-Link software are now up-to-date and ready to be used again.